



GCT-8 Parts Diagram


Gorilla Concrete Tools

An OBHC Inc. Company


33549 Royalton Road, Unit 9

Columbia Station, OH 44028


(440)236-5112

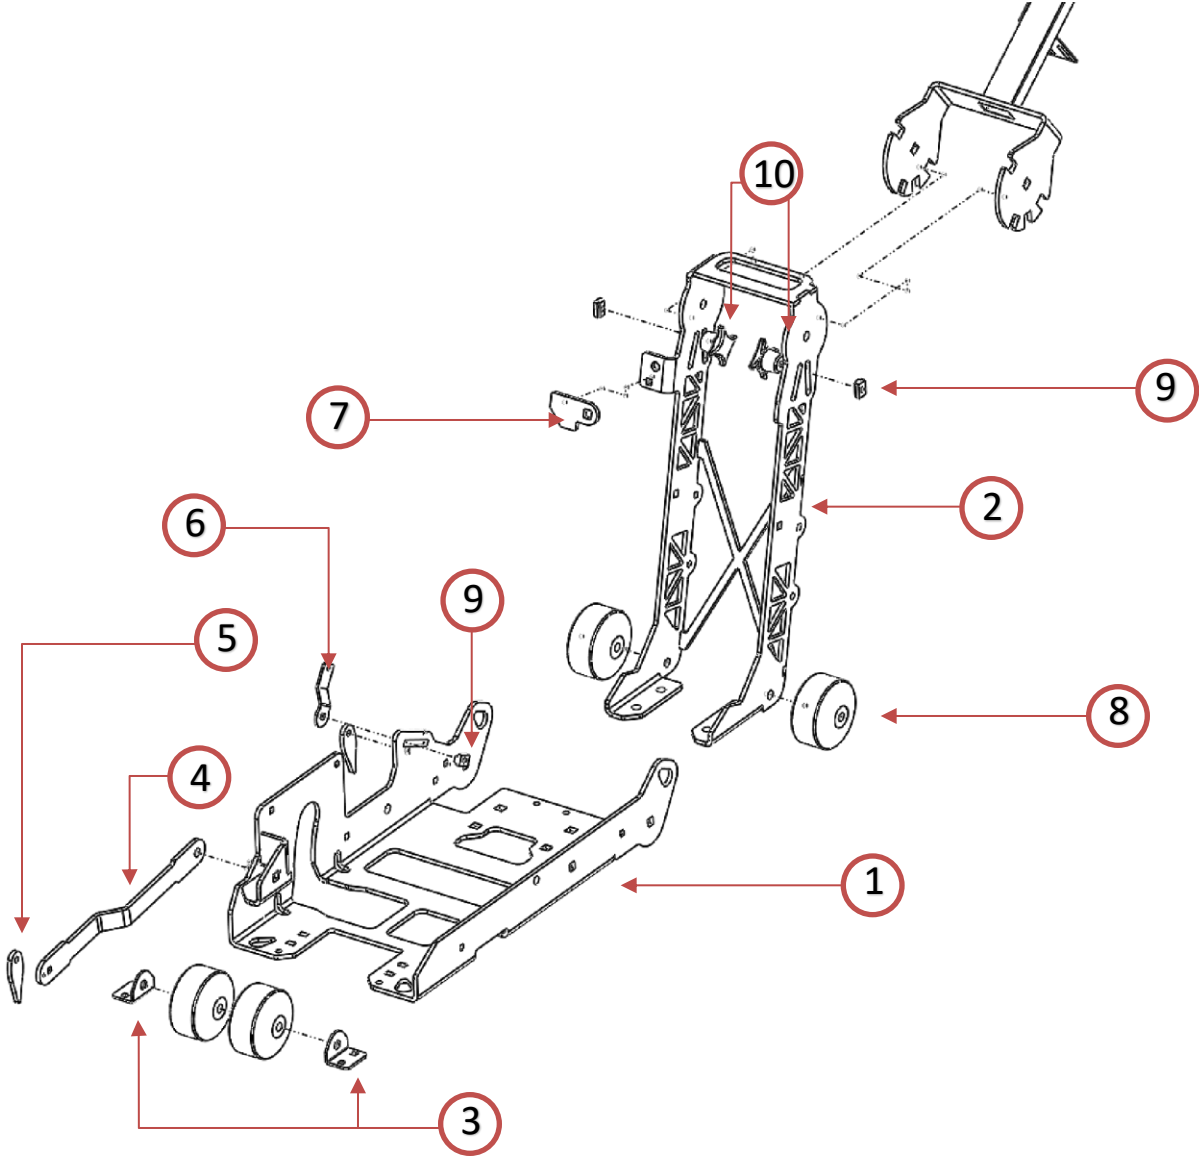


Part number	Description
8-1	GCT-8 Series III saw base
8-2	GCT-8 Series III handle mount
8-3	Front wheel mounting brackets
8-4	Pointer arm
8-5	Pointer
8-6	Height adjustment handle
8-7	Lift-lower arm lock
8-8	Wheel
8-9	Position lock nut
8-10	4 arm knob

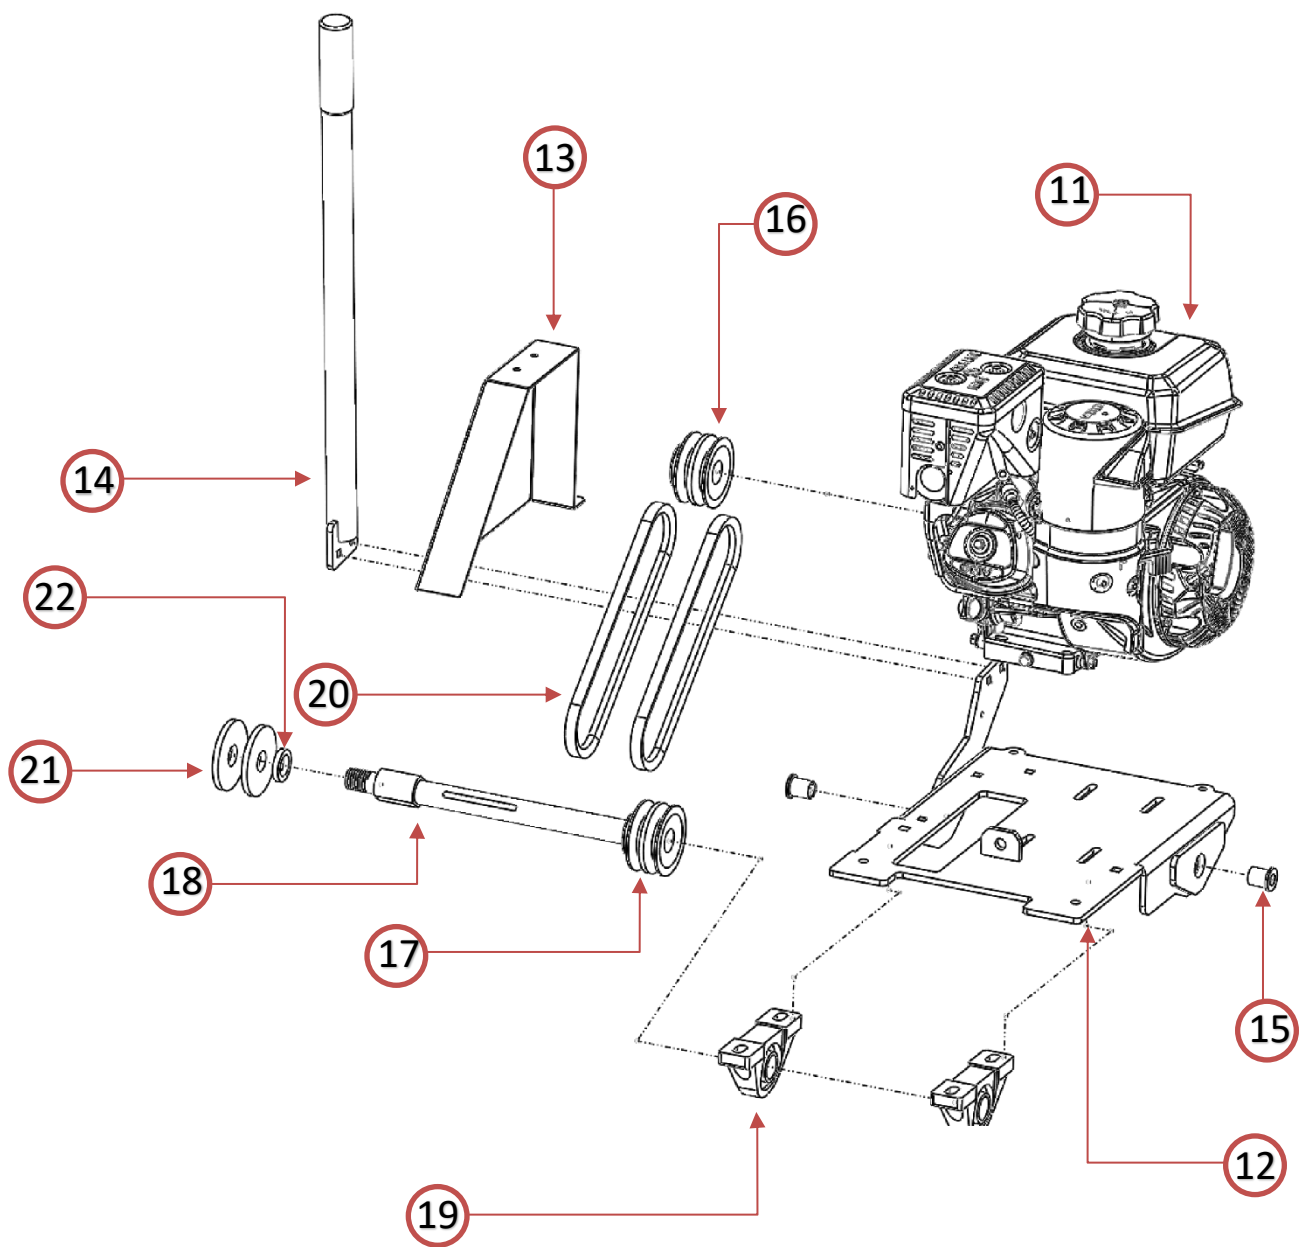


Part number	Description
8 – 11	Engine
8 – 12	Motor mounting plate
8 – 13	Belt guard
8 – 14	Lift-Lower handle
8 – 15	Motor mounting plate bearing
8 – 16	Engine pulley
8 – 17	Shaft pulley
8 – 18	Shaft
8 – 19	Shaft Bearing
8 – 20	Drive Belt
8 – 21	Blade washer
8 – 22	Blade shim kit
8 – 46	Shaft pulley key (not pictured)

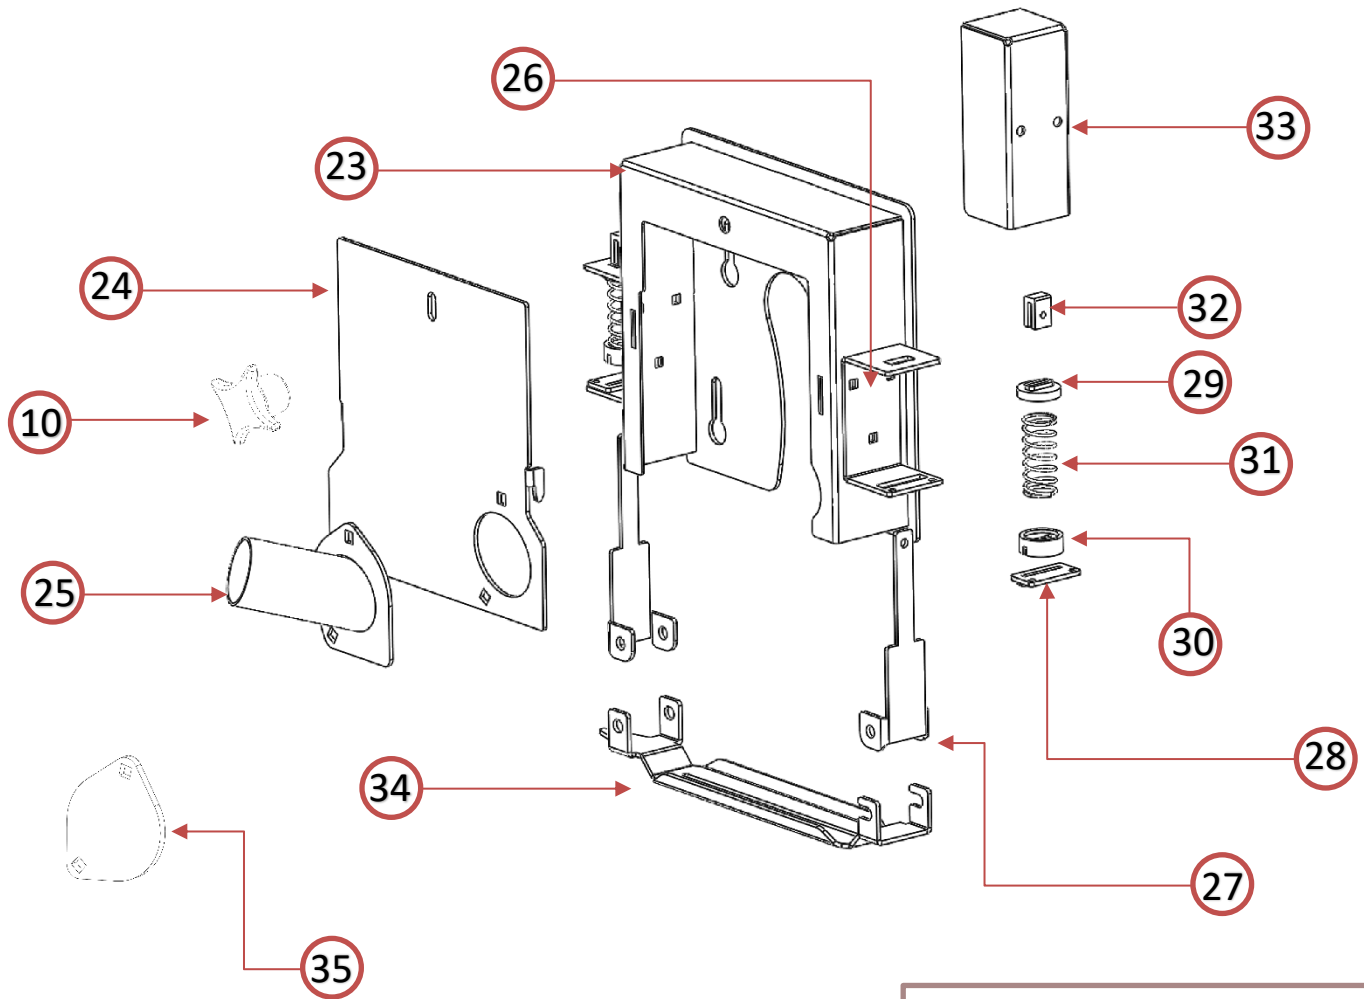

Part number	Description
8 – 23	Dust box
8 – 24	Dust box cover
8 – 25	Dust port
8 – 26	Spring mount bracket
8 – 27	Skid plate attachment
8 – 28	Lower slide
8 – 29	Upper slide/ upper spring perch
8 – 30	Spring perch
8 – 31	Spring
8 – 32	Slide stop
8 – 33	Spring cover
8 – 34	Skid plate
8 – 35	Dust port block off plate
8 – 36	V 1.0 Dust box assembly
8 – 37	V 2.0 Dust box assembly

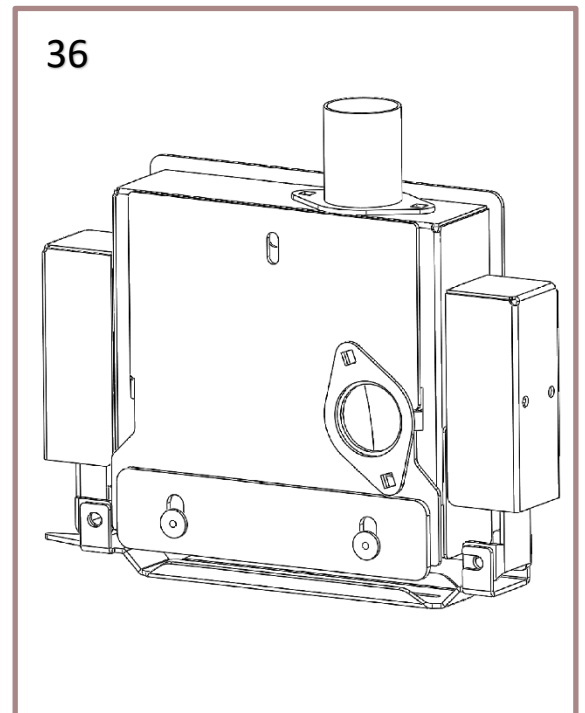

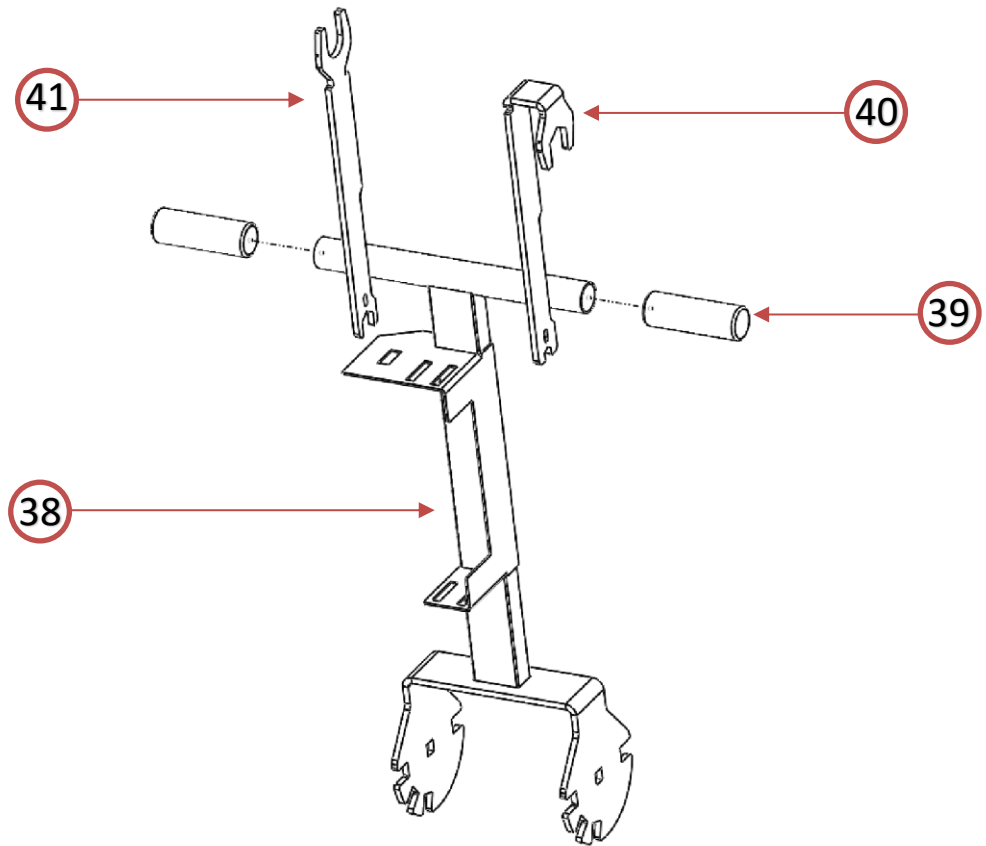

Part Number	Description
8 – 38	Handle assembly
8 – 39	Handle grip
8 – 40	Blade nut wrench
8 – 41	Blade shaft wrench

Optional Equipment

Part number	Description
8 – 42	All terrain wheel kit (GCT-8 AWK-1)
8 – 43	Remote engine shut off
8 – 44	Remote oil drain kit
8 – 45	Propane fuel conversion (CALL FOR DETAILS) *Special order item