



SG - 8 Parts Diagram


Gorilla Concrete Tools

An OBHC Inc. Company


33549 Royalton Road, Unit 9

Columbia Station, OH 44028


(440)236-5112

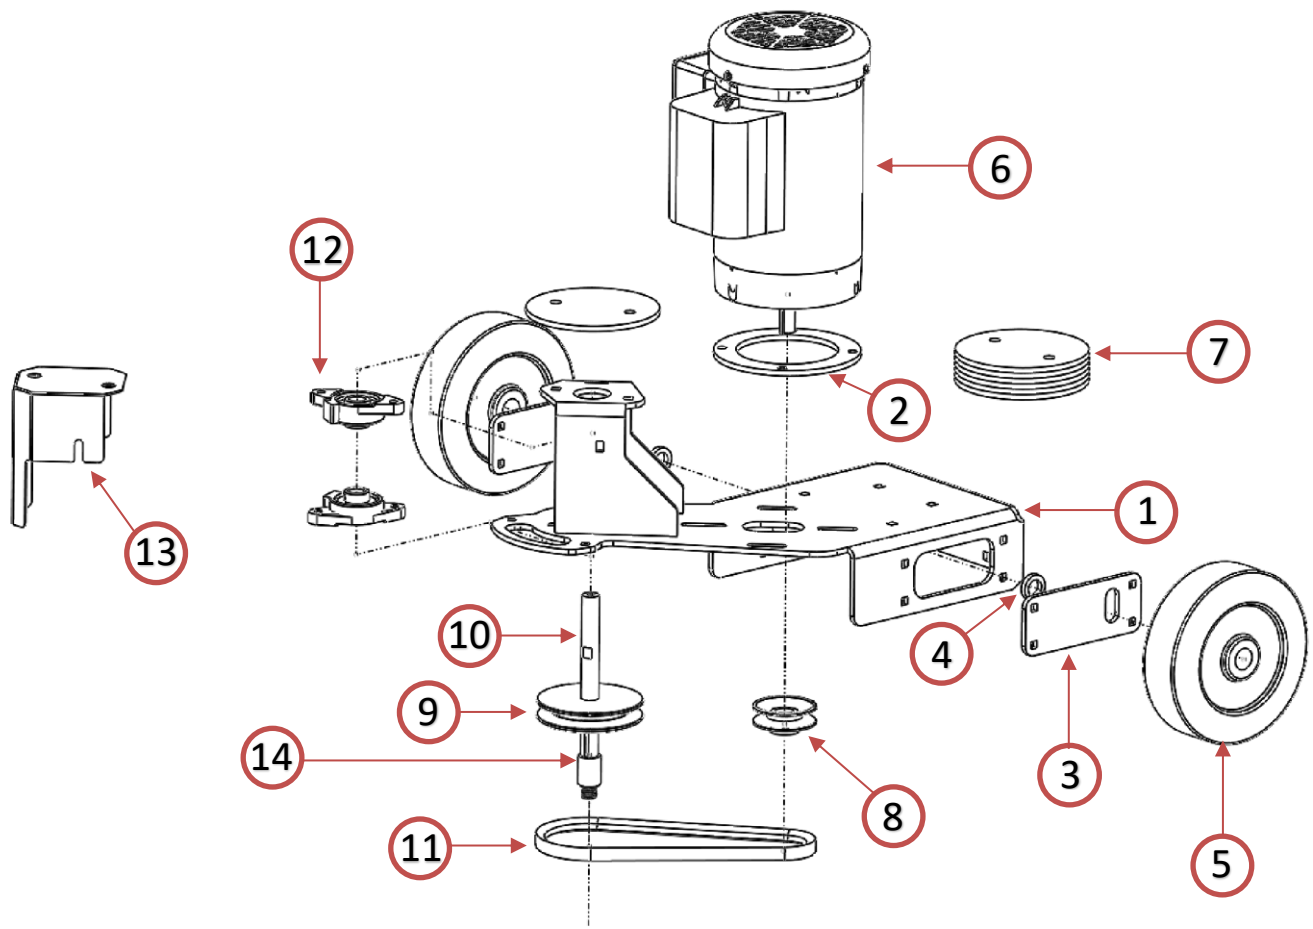

Part number	Description
SG 8 – 1	Surface grinder main base
SG 8 – 2	Motor mounting plate
SG 8 – 3	Wheel positioning plate
SG 8 – 4	Positioning plate spacer
SG 8 – 5	8" Non-marking wheels
SG 8 – 6	Electric drive motor
SG 8 – 7	Surface grinder weights
SG 8 – 8	SG – 8 Drive pulley
SG 8 – 9	SG – 8 Driven pulley
SG 8 – 10	SG – 8 drive shaft
SG 8 – 11	Cogged V-belt
SG 8 – 12	Shaft bearing (sold individually)
SG 8 – 13	Shaft/pulley cover
SG 8 – 14	Shaft key stock
SG 8 – 15	Non-marking wheel mounting bolt
SG 8 – 16	Motor mounting fastener set (not shown)
SG 8 – 17	Positioning plate fastener set (not shown)
SG 8 – 18	Weight kit fastener set (not shown)
SG 8 – 19	Bearing mounting bolts (not shown)
SG 8 – 20	Drive motor cord (not shown)
SG 8 – 21	

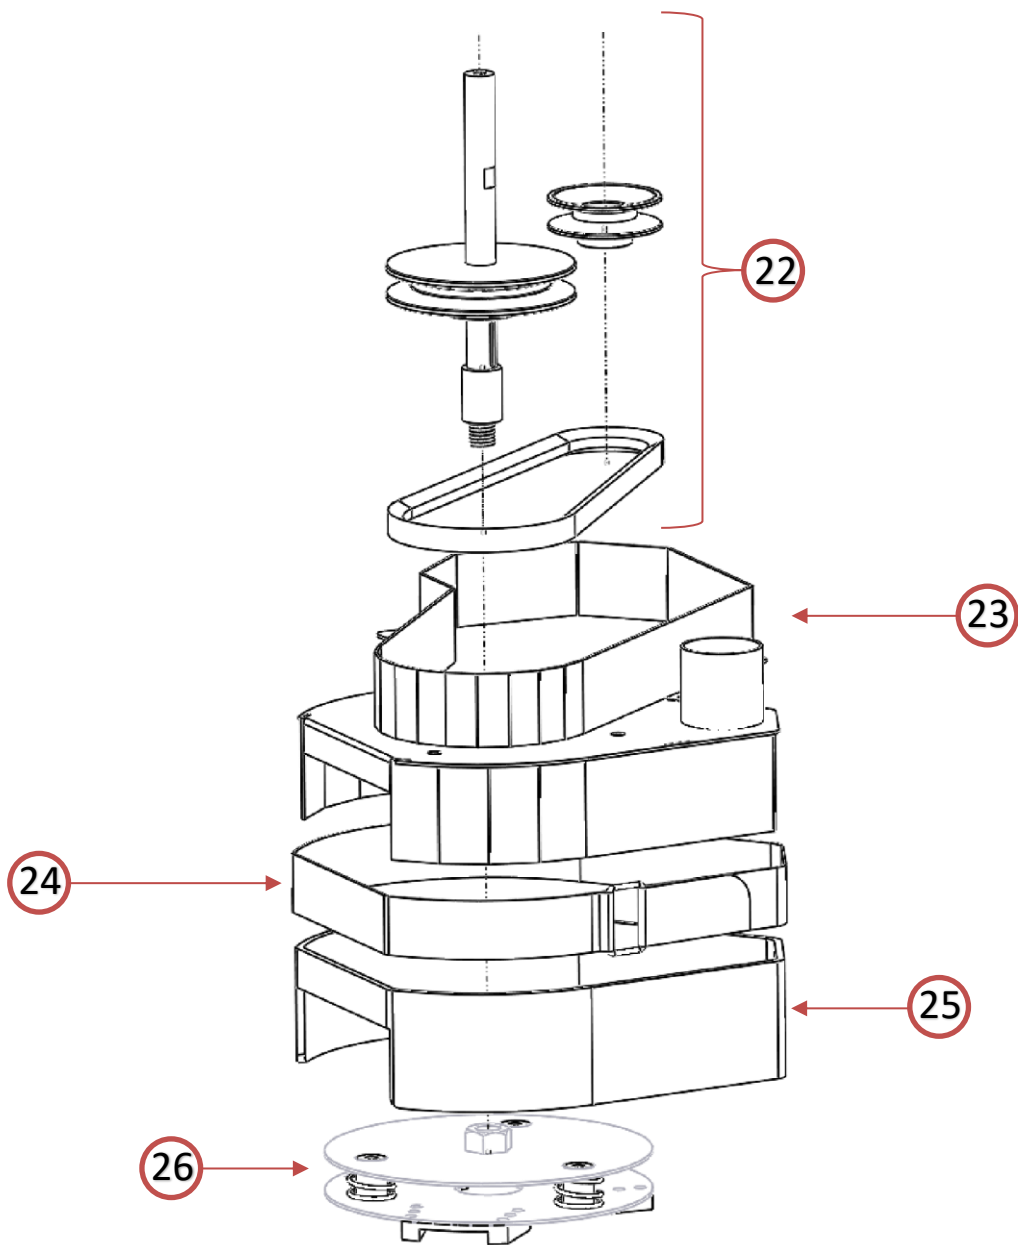

Part number	Description
SG8 – 22	Drive component set
SG8 – 23	Dust shroud
SG8 – 24	Dust skirt retention strap
SG8 – 25	Dust skirt
SG8 – 26	Self-leveling quick-change tool head
SG8 – 27	Self-leveling Cup wheel driver (not shown)
SG8 – 28	Self-leveling Puck driver (not shown)
SG8 – 29	Self-leveling Diamabrush tool holder (not shown)
SG8 – 30	Self-leveling orbital 7" pad driver (not shown)
SG8 – 31	Dust shroud fastener set (not shown)
SG8 – 32	
SG8 – 33	
SG8 – 34	
SG8 – 35	

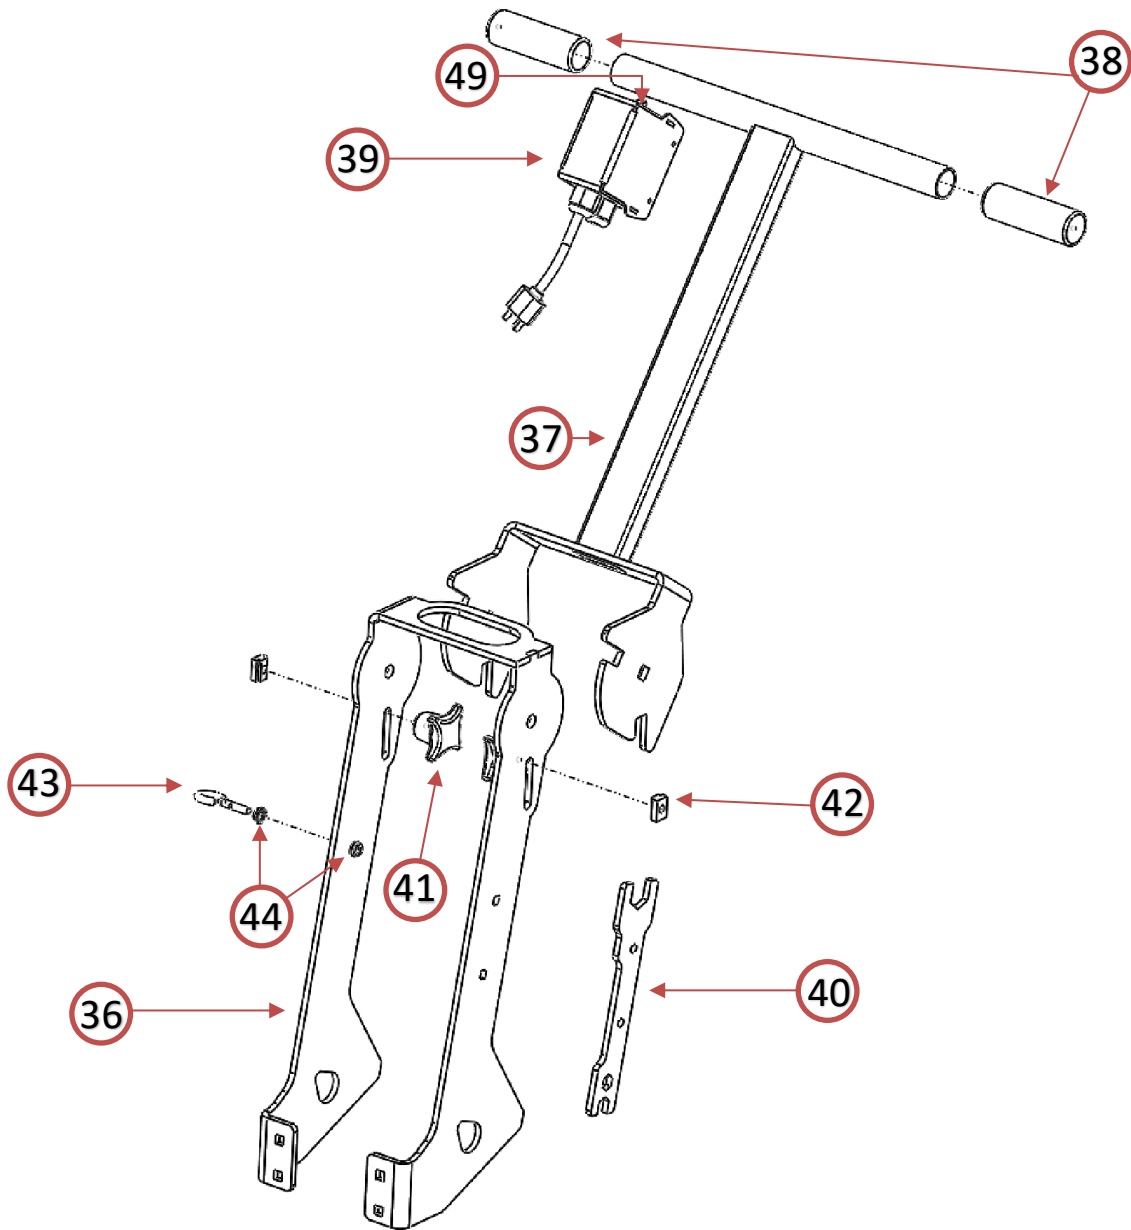

Part number	Description
SG8 – 36	Handle Base
SG8 – 37	Handle
SG8 – 38	Handle grips
SG8 – 39	Electrical box
SG8 – 40	Shaft/multi-use wrench
SG8 – 41	4-arm knob
SG8 – 42	T-slot nut
SG8 – 43	Electrical cord eye bolt
SG8 – 44	Eye bolt fastener set
SG8 – 45	Handle base mounting fastener set (not shown)
SG8 – 46	Handle pivot mounting fastener set (not shown)
SG8 – 47	Wrench mounting hardware set (not shown)
SG8 – 48	Electrical box fastener set (not shown)
SG8 – 49	Electrical box on/off switch

Optional Equipment

Part number	Description