

2020

# GCT-8 Parts Diagram


Gorilla Concrete Tools

An OBHC Inc. Company


33549 Royalton Road, Unit 9

Columbia Station, OH 44028


(440)236-5112

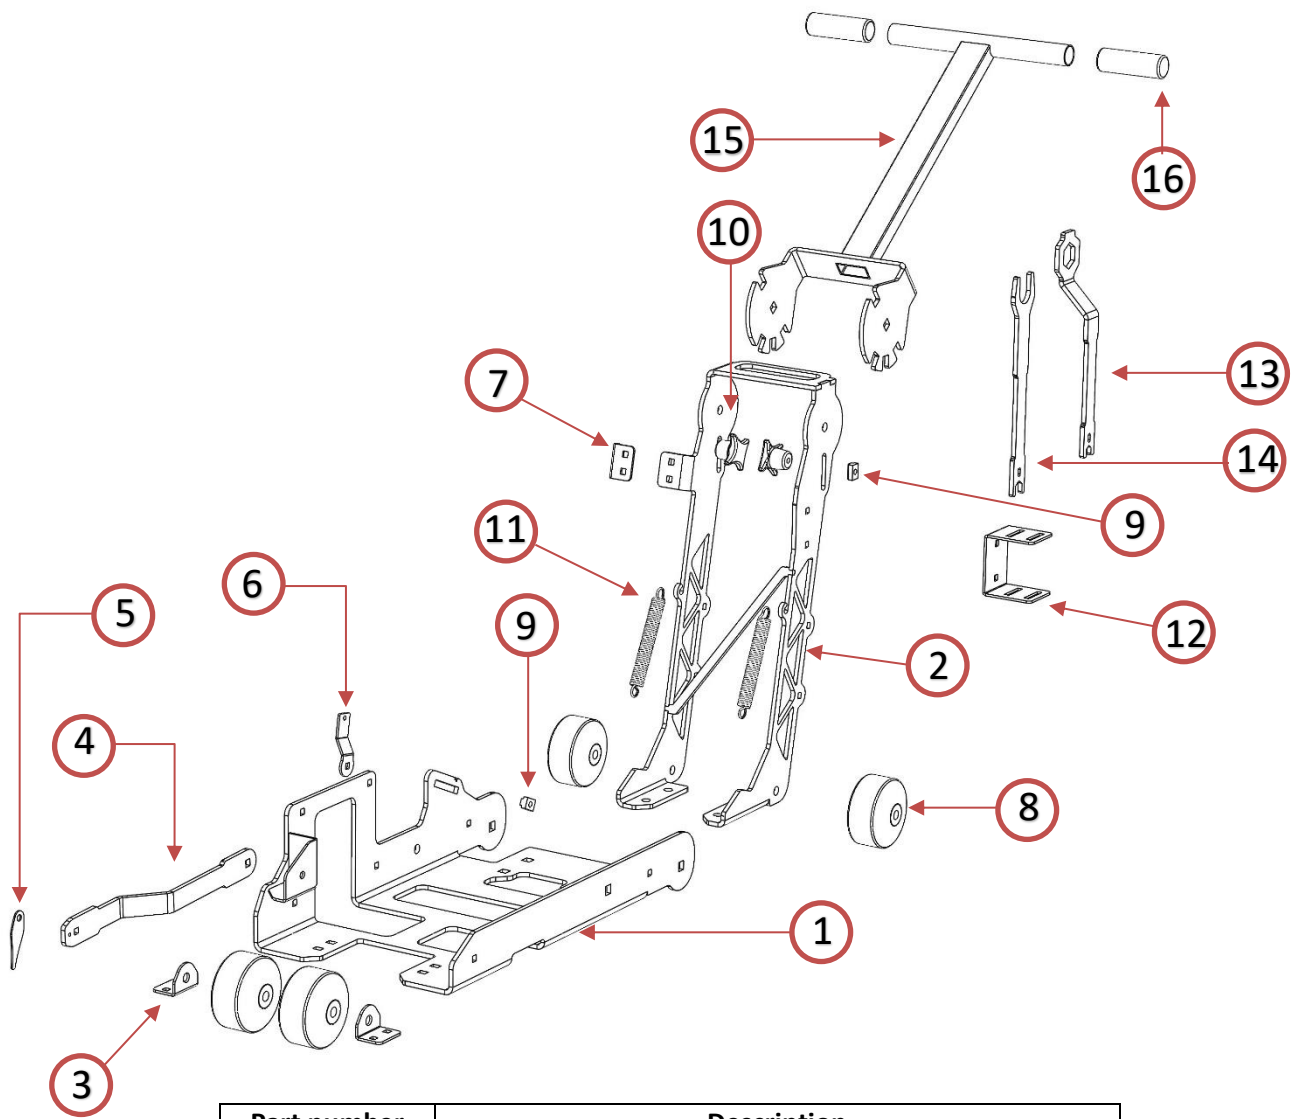

Part number	Description
8-1	GCT-8 Series III saw base
8-2	GCT-8 Series III handle mount
8-3	Front wheel mounting brackets
8-4	Pointer arm
8-5	Pointer
8-6	Height adjustment handle
8-7	Lift-lower arm lock
8-8	Wheel
8-9	Position lock nut
8-10	4-arm knob
8-11	Pivot plate spring
8-12	Wrench holder
8-13	Nut wrench
8-14	Shaft wrench
8-15	Saw handle
8-16	Handle Grip

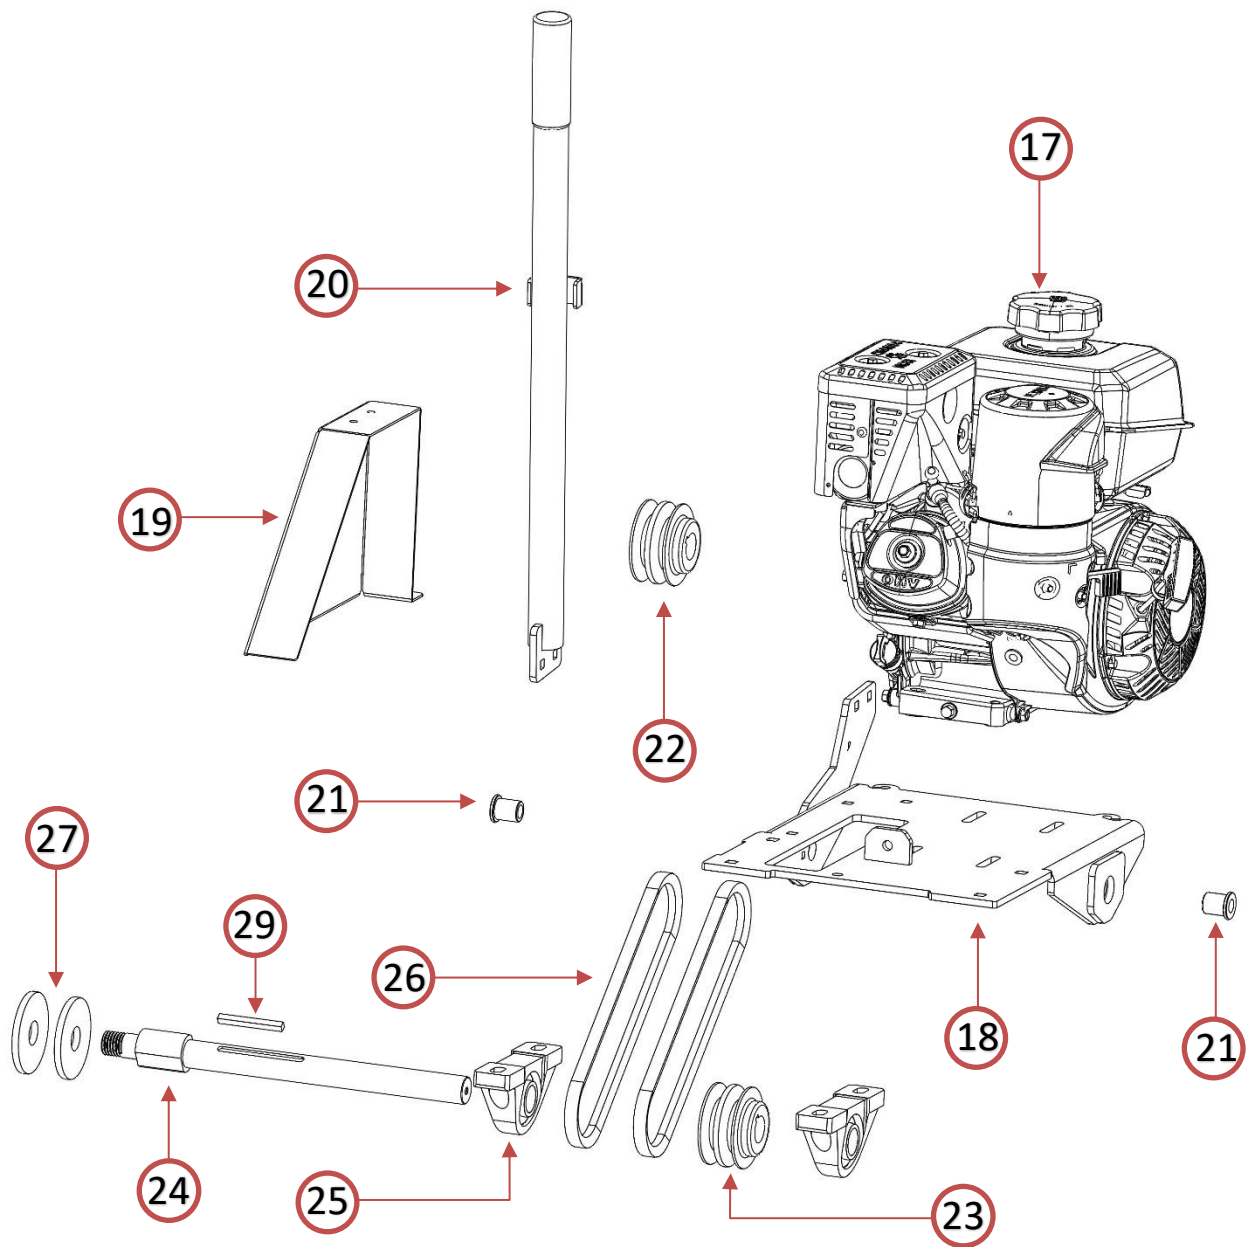

Part number	Description
8 – 17	Engine
8 – 18	Motor mounting plate
8 – 19	Belt guard
8 – 20	Lift-Lower handle
8 – 21	Motor mounting plate bearing
8 – 22	Engine pulley
8 – 23	Shaft pulley
8 – 24	Shaft
8 – 25	Shaft Bearing
8 – 26	Drive Belt
8 – 27	Blade washer
8 – 28	Blade shim kit (Not Shown)
8 – 29	Shaft pulley key

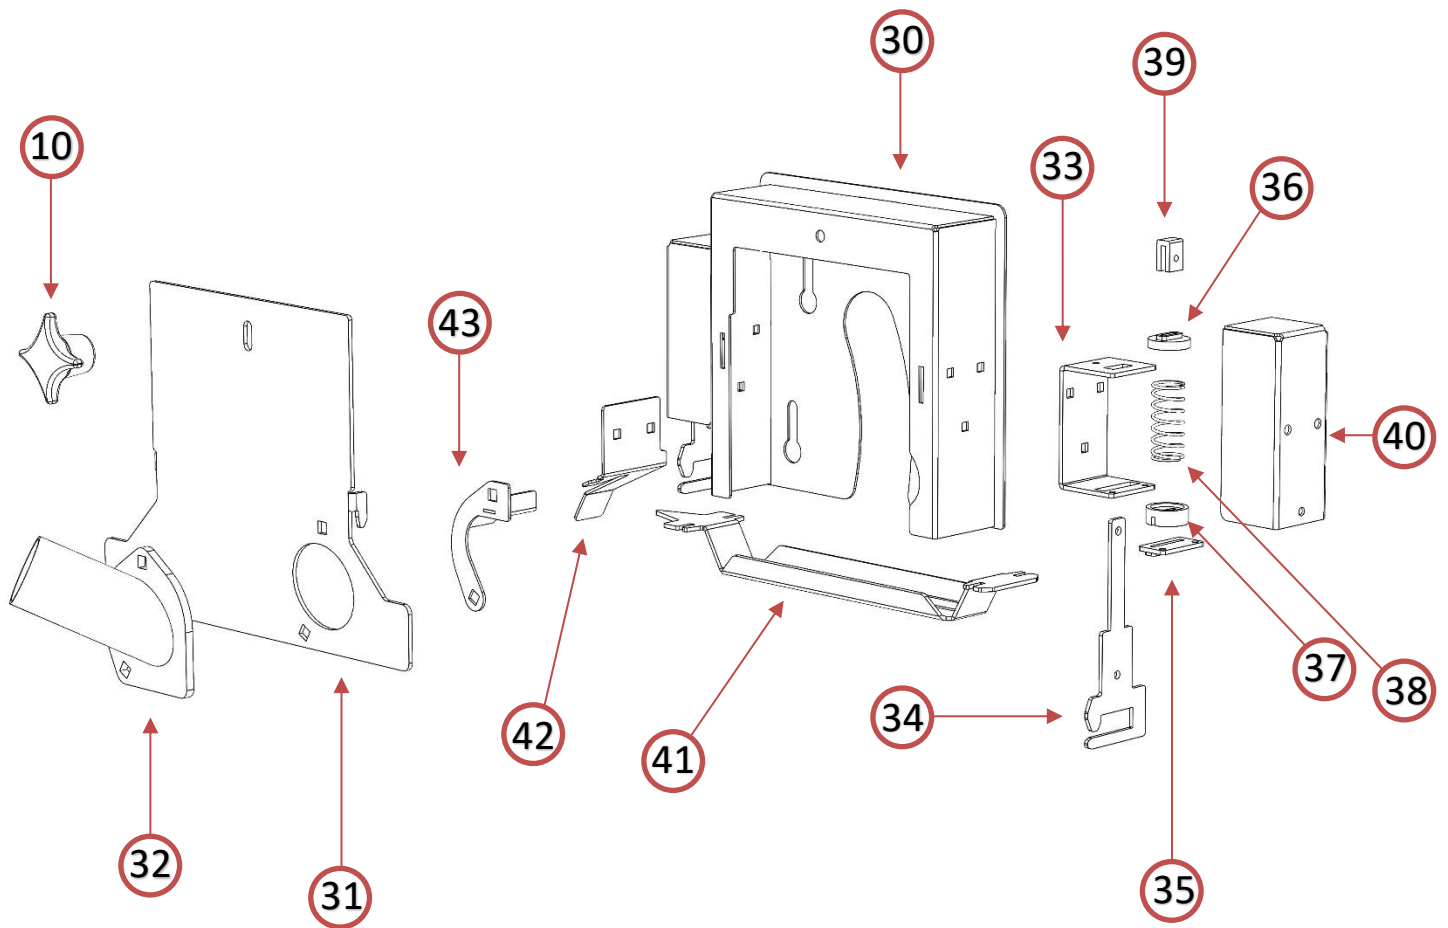

Part number	Description
8 – 30	Dust box
8 – 31	Dust box cover
8 – 32	Dust port
8 – 33	Spring mount bracket
8 – 34	Skid plate attachment
8 – 35	Lower slide
8 – 36	Upper slide/ upper spring perch
8 – 37	Spring perch
8 – 38	Spring
8 – 39	Slide stop
8 – 40	Spring cover
8 – 41	Skid plate
8 – 42	Internal dust port baffle
8 – 43	Cover mounted baffle
8 – 44	
8 – 45	Dust port block off plate (Not Shown)
8 – 46	V 3.0 Dust box assembly

# Optional Equipment

Part number	Description
8-47	All terrain wheel kit (GCT-8 AWK-1)
8-48	Remote engine shut off
8-49	Remote oil drain kit
8-50	Propane fuel conversion (CALL FOR DETAILS) *Special order item