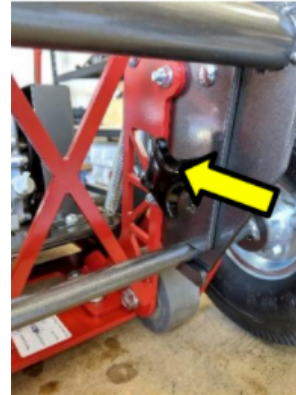


## Product Set-Up


### Attaching the Mounting Brackets

1. Begin by installing the wheel kit mounting brackets to the handle assembly using the four (4) carriage bolts included in the kit. (See yellow arrows in Fig. 1 & 2).
2. Using a 1/2" wrench, tighten the supplied nuts onto the carriage bolts

**Figure 1**



**Figure 2**

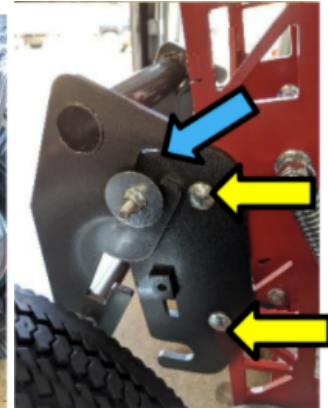

### Mounting the Wheel Assembly

1. Once the mounting brackets have been secured, attach the wheel assembly. With the position lock in the up position (Fig. 3 yellow arrow), begin to slide the wheel assembly over the aluminum sleeve (Fig. 2 blue arrow) until you have reached the end of the channel
2. After sliding the wheel assembly onto the aluminum sleeves pivot the wheel assembly to the position shown in Figure 3.
3. Loosen the black knob (Fig. 4). and slide it to the bottom of the slot.
4. Make sure the position lock is in the lowest position (Fig. 5).
5. Completely tighten both black knobs to ensure that the wheel kit is completely secured.

**Figure 3**



**Figure 4**



**Figure 5**

